



Product Data Sheet

FilmTec™ BW30XFRLE-400/34 Element

Description

Ideal for: reverse osmosis plant managers and operators dealing with challenging waters and wastewaters who are seeking an advanced membrane treatment with good water purity, improved fouling resistance and low energy consumption.



FilmTec™ BW30XFRLE-400/34:

- Offers good salt-rejection with 30% lower pressures
- Delivers excellent silica, nitrate and ammonium rejection
- Provides the most effective cleaning performance, robustness and durability due to its widest cleaning pH range (1-13) and chemical tolerance and the support of DuPont technical representatives

Product Type



Spiral-wound element with polyamide thin-film composite membrane

Typical Properties

FilmTec™ Element	Active Area		Feed Spacer	Permeate Flow Rate		Typical Stabilized Salt	Minimum Salt
	(ft ²)	(m ²)	Thickness (mil)	(GPD)	(m ³ /d)	Rejection (%)	Rejection (%)
BW30XFRLE-400/34	400	37	34-LDP	11,500	43.5	99.3	99.1

1. Permeate flow and salt (NaCl) rejection based on the following standard test conditions: 2,000 ppm NaCl, 150 psi (10.3 bar), 77°F (25°C), pH 8, 15% recovery.
2. Flow rates for individual elements may vary but will be no more than ±15%.
3. Stabilized salt rejection is generally achieved within 24-48 hours of continuous use; depending upon feedwater characteristics and operating conditions.
4. Sales specifications may vary as design revisions take place.
5. Active area guaranteed ± 3%. Active area as stated by DuPont Water Solutions is not comparable to nominal membrane area often stated by some manufacturers.

Element Dimensions

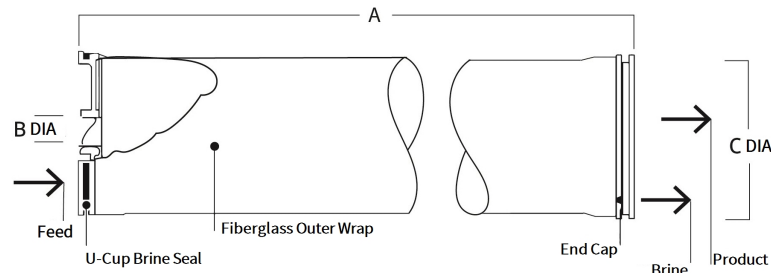

FilmTec™ supplies coupler part number 313198 with each element. Each coupler includes two 3912 EPR O-rings (part number 151705).

Dimensions – inches (mm)						1 inch = 25.4 mm
	A		B		C	
FilmTec™ Element	(in.)	(mm)	(in.)	(mm)	(in.)	(mm)
BW30XFRLE-400/34	40.0	1,016	1.125 ID	29 ID	7.9	201

1. Refer to [FilmTec™ Design Guidelines for multiple-element systems of 8-inch elements](#) (Form No. 45-D01695-en).
2. Element to fit nominal 8-inch (203-mm) I.D. pressure vessel.

Operating and Cleaning Limits

Maximum Operating Temperature ^a	113°F (45°C)
Maximum Operating Pressure	600 psig (41 bar)
Maximum Element Pressure Drop	15 psig (1.0 bar)
pH Range	
Continuous Operation ^a	2 – 11
Short-Term Cleaning (30 min.) ^b	1 – 13
Maximum Feed Silt Density Index (SDI)	SDI 5
Free Chlorine Tolerance ^c	< 0.1 ppm

- a. Maximum temperature for continuous operation above pH 10 is 95°F (35°C).
- b. Refer to [FilmTec™ Cleaning Guidelines](#) (Form No. 45-D01696-en).
- c. Under certain conditions, the presence of free chlorine and other oxidizing agents will cause premature membrane failure. Since oxidation damage is not covered under warranty, DuPont Water Solutions recommends removing residual free chlorine by pretreatment prior to membrane exposure. Please refer to [Dechlorinating Feedwater](#) (Form No. 45-D01569-en) for more information.

Additional Important Information

Before use or storage, review these additional resources for important information:

- [Usage Guidelines for FilmTec™ 8" Elements](#) (Form No. 45-D01706-en)
- [Start-Up Sequence](#) (Form No. 45-D01609-en)

Product Stewardship

DuPont has a fundamental concern for all who make, distribute, and use its products, and for the environment in which we live. This concern is the basis for our product stewardship philosophy by which we assess the safety, health, and environmental information on our products and then take appropriate steps to protect employee and public health and our environment. The success of our product stewardship program rests with each and every individual involved with DuPont products—from the initial concept and research, to manufacture, use, sale, disposal, and recycle of each product.

Customer Notice

DuPont strongly encourages its customers to review both their manufacturing processes and their applications of DuPont products from the standpoint of human health and environmental quality to ensure that DuPont products are not used in ways for which they are not intended or tested. DuPont personnel are available to answer your questions and to provide reasonable technical support. DuPont product literature, including safety data sheets, should be consulted prior to use of DuPont products. Current safety data sheets are available from DuPont.

Please be aware of the following:

- The use of this product in and of itself does not necessarily guarantee the removal of cysts and pathogens from water. Effective cyst and pathogen reduction is dependent on the complete system design and on the operation and maintenance of the system.

Regulatory Note

These products may be subject to drinking water application restrictions in some countries; please check the application status before use and sale.



AQUAANALYTIC LLC



Business Center 1, M Floor,
The Meydan Hotel, Nad AlSheba,
Dubai, U.A.E.

+31 715 69 01 51

<https://aquaanalytic.ae>
info@aquaanalytic.ae